



Commercial
Electric

35 LED WORK LIGHT & TORCH

MANUAL - MODEL NO. CEWL35LED



2 YEAR
Replacement
Warranty

Please read the operating instructions carefully prior to use. Please retain the instructions in a safe place for future reference.

INTRODUCTION

Congratulations on purchasing a 35 LED Work Light & Torch. We aim to provide quality work lights at an affordable price. We hope you will enjoy using these work lights for many years.

The 35 LED Work Light & Torch CEWL35LED are intended for DIY use only.

SPECIFICATIONS

Model no.:	CEWL35LED
Work Light LED:	26
Hand Torch LED:	9
Charge Time:	8hrs if completely discharged 5hrs if not completely discharged
Run Time:	5 hours
Weight:	1 Kg
Features:	Magnetic Holder AC/DC Adaptor 360 Degree Swivel Hook

SAFETY INSTRUCTIONS

Warning! When using mains-powered equipment precautions, including the following, should always be followed to reduce risk of fire, electric shock, personal injury and material damage.

Read the whole manual carefully and make sure you know how to switch the work lights off, in an emergency, before operating the work lights.

Save these instructions and other documents supplied with these work lights for future reference.

ELECTRICAL SAFETY

The light has been designed for 230V and 240V only. Always check that the power supply corresponds to the voltage on the rating plate.

Note: The supply of 230V and 240V on work lights are interchangeable for Australia and New Zealand.



This work light is double insulated in accordance with AS/NZS 3100:2002; therefore no earth wire is required.

If the supply cord is damaged, it must be replaced by the manufacturer or an authorised Service Centre in order to avoid a hazard.

Note: Double insulation does not take the place of normal safety precautions when operating this light. The insulation system is for added protection against injury resulting from a possible electrical insulation failure within the work light.

GENERAL SAFETY RULES

1. Do not look directly into the light globe while it is turned on, severe eye damage could result.
2. Avoid placing the light where there are flammable liquids or gases present.
3. Do not operate the light if the globe cover is broken or the lead or plug has been damaged.
4. Do not abuse the cord. Never carry the light by its cord or pull it to disconnect from the socket. Keep the cord away from heat, oil and sharp edges.

Warning! Always keep the work light at least 6 metres away from pools or spas.

5. Users. This product is not intended for use by young children or infirmed persons without supervision. Young children should be supervised to ensure that they do not play with this product.
6. If exposed skin feels hot while you are in the lighted area move the light further away from yourself.
7. Always allow the light to cool before storing.
8. Always keep the light 1 metre away from any surface.

CHARGING AND BATTERY SAFETY INSTRUCTIONS

- Before charging the battery, thoroughly read all instructions within this manual.

Warning! Do not allow any liquid to get inside the charger. Electric shock may result. To facilitate cooling of the internal battery once charged, avoid placing the charger or LED light in warm environments.

- The charger is not intended for any uses other than charging the internal rechargeable batteries of the LED light. Any other use may result in risk of fire, or electric shock.
- Do not place any object on top of the charger or place the charger on a soft surface that may result in excessive internal heat. Place the charger in a position away from any heat source.
- To reduce risk of damage to the adaptor and cord, pull by the adaptor rather than the cord when disconnecting from the mains supply.
- Make sure cord is located so that it will not be stepped on, tripped over, or otherwise subjected to damage or stress.
- An extension cord should not be used unless absolutely necessary. Use of an improper extension cord could result in the risk of fire, or electric shock.
- Do not operate charger if it has received a sharp blow, been dropped or otherwise damaged in any way, take it to an authorised electrician.
- Do not disassemble charger, take it to an authorised electrician should service or repair be required. Incorrect reassembling may result in a risk of electric shock or fire.
- To reduce risk of electric shock, unplug charging adaptor from the socket outlet before attempting any cleaning.
- DO NOT store or use the light and battery pack in locations where the temperature may reach or exceed 40°C (such as outside sheds or metal buildings in summer).
- The AC adaptor is designed to operate on standard household electrical power (220 - 240 volts). Do not attempt to use it on any other voltage!
- The longest life and best performance can be obtained if the LED light is charged when the air temperature is between 18 - 24° C. Do not charge the unit in an air temperature below 10° C or above 40° C. This is important and will prevent damage to the internal battery.
- Do not incinerate the internal battery pack even if it is seriously damaged or is completely worn out. The battery can explode in a fire.
- Never attempt to open the light housing or internal battery for any reason. If the housing of the light breaks or cracks, immediately discontinue use and do not recharge.

The battery has been designed to provide maximum trouble free life. However, like all batteries, it will eventually wear out.

To obtain the longest possible battery life, we suggest the following:

- Store and charge your battery in a cool area. Temperatures above or below normal room temperature will shorten battery life.
- Never store the battery in a discharged condition. Recharge them immediately after they are discharged.
- All batteries gradually lose their charge. The higher the temperature the quicker they lose their charge. If you store your light for long periods of time without use, recharge the battery every month or two. This practice will prolong battery life.

CHARGER AND BATTERY PACK INFORMATION

CHARGING THE BATTERY

- Plug the adaptor in an appropriate AC power outlet and switch on at the mains.
- Connect the adaptor lead into the unit. The red light on the light will illuminate.
- The red light indicates the internal battery of the light is being charged. It will take 5 - 8 hours to charge a fully drained battery.
- Once the battery has been sufficiently charged the green light will illuminate and the red light will extinguish.
- Should the green light illuminate as soon as the LED light is charging the battery is already sufficiently charged and will not require further charging.

Note: After the green light illuminates the charger will cease charging. Once the battery is fully charged it is recommended to disconnect the adaptor from the power supply.

If the light fails to come on:

- Check the adaptor is securely plugged into the AC power outlet and the mains is switched on.

CHARGING USING THE AC ADAPTOR

The LED light can be charged by using the AC adaptor only. Simply connect the adaptor to an AC power outlet and connect the adaptors lead to the LED light by removing the rubber protective cover at the bottom of the unit. To charge a fully drained LED light battery this charging method will generally take 5 - 8 hours. After an 5 - 8 hour period disconnect the adaptor from the AC power outlet. When charging in this method there will be no lights to indicate what level of charge has been achieved.

OPERATION

On/Off Switch

- To switch on the torch light, press the yellow button.
- To switch on the tube, press the same button again.
- To turn off, press the same button a third time.

Rotating Hook

Used to hang the light in order to free up your hands to perform other tasks.

CONTENTS

- 1 x LED Worklight & Torch
- 1 x AC/DC Adaptor and Charger
- 1 x Instruction Manual

PRODUCT WARRANTY

2 YEAR REPLACEMENT WARRANTY

Your Commercial Electric product is covered for a Period of 24 months from the **ORIGINAL Date of purchase.**

The Warranty covers faulty parts or workmanship.

The warranty is only made available by returning the product to your point of purchase with a **confirmed cash register receipt.**

PURCHASED FROM:

DATE OF PURCHASE:

THIS WARRANTY FORM SHOULD BE RETAINED BY THE CUSTOMER AT ALL TIMES.

WARNING

The following actions will result in the warranty being void:

- If the product has been operated on a supply voltage other than that specified on the unit.
- If the product shows signs of damage or defects caused by or resulting from abuse, accidents or alterations.
- If the product has been disassembled or tampered with in any way.

Note: Warranty excludes consumable parts such as tubes, globes, batteries and all accessories.

YOUR WARRANTY FORM SHOULD BE RETAINED BY YOU AT ALL TIMES.

SHOULD YOU HAVE ANY QUESTIONS PRIOR TO RETURNING YOUR PRODUCT FOR WARRANTY OR REPAIR PLEASE TELEPHONE OUR CUSTOMER SERVICE HELPLINE:

**Australia 1800 069 486
New Zealand 0508 069 486**

TO ENSURE A SPEEDY RESPONSE PLEASE HAVE THE MODEL NUMBER AND DATE OF PURCHASE AVAILABLE. A CUSTOMER SERVICE REPRESENTATIVE WILL TAKE YOUR CALL AND ANSWER ANY QUESTIONS YOU MAY HAVE RELATING TO THE WARRANTY POLICY OR PROCEDURE.

Commercial Electric

5 Chestnut Crt, Dingley, Vic, Australia, 3172

Telephone: 03 9558 3999

Facsimile: 03 9558 0583

www.commercialelectric.com.au